

# PDS-100

## USER MANUAL

PHILIA SMART DOOR LOCK



### Application Models

- PDS-100A [Basic]
- PDS-100B [BLE] (Bluetooth Low Energy)
- PDS-100Z [Z-wave]
- PDS-100BZ [BLE + Z-wave]

### WARNING

No door lock can guarantee its own security or safety by itself. You should contact an authorized locksmith or other security specialist to reduce the risk of intrusion from damage caused by force or technical means and to enhance security.

Thank you for purchasing PDS-100. This manual is designed to make the product more convenient and safe to use. Please read it carefully before using this product.

www.philiatech.co.kr

### Package Contents

- Exterior Unit : Identified by the keypad screen, installed on the outer part of door
- Interior Unit : Identified with the battery cover, installed on the interior part of door
- Number Pad : Displays numbers for password entry and recognizes compatible RFID objects
- Emergency Power Contact : Power can be supplied from the outside using a 9 Volt battery
- Key Cover : Prevents exposure of the key cylinder and allows easy access to key-entry for emergency
- Registration [R]Button : This button allows you to access all the functions and settings for this door lock
- Thumb-Turn : You can manually unlock and lock your deadbolt using the turn lever
- Lock Button : Used for locking when in "Manual Lock Mode" and also used for the "Double Lock" feature
- Magnetic Sensor : This sensor allows the doorlock to know when the door is closed so that it can automatically lock
- BLE / Z-Wave Pack : Sold separately. This module allows the doorlock to have Bluetooth and Z-Wave features
- Battery Cover : Battery cover of interior unit
- Battery : 4 pcs of AA 1.5V LR6 Alkaline Battery
- Interior Plate : This plate is used to hold the exterior panel onto the door. It is also used to connect the interior panel to the door
- Card : ISO14443A-Part3 RFID Card
- Adapter 2type [D], [H] : Used to connect Key Tail and Thumb-Turn
- Screw Guide-A, B, C [3type] : Used to connect Exterior unit and Key Cylinder
- 3/16" Inch Screw (2EA) : These screws will hold your key cylinder using the appropriate "Screw Guide-A,B,C".
- 4/16" Inch Screw (3EA) : These screws will hold your key cylinder using the appropriate "Screw Guide-A,B,C".
- M4X40mm Screw (3EA) : These screws are used to hold the exterior panel to the "Interior Plate"
- M4X6mm Screw (3EA) : These screws are used to hold the Interior Unit to the "Interior Plate"
- 4X16mm Screw Tapping (2EA) : Used to securely attach the magnetic sensor to the door frame
- Magnet : Do not misplace! This piece is crucial for your automatic locking function. Losing it may also cause other malfunctions.
- User Manual : Instruction for users
- Install Guide : Instruction for installation
- Low voltage : Indicator for low power (battery)
- Reset : System reboot

### CAUTION

As with any radio-based technology, it should be noted that the accuracy and reliability of the Philia lock's in-and-outside sensor cannot be guaranteed. Users should not rely solely on the Philia lock's sensor for security purposes and should always use caution. This manufacturer assumes no responsibility for incorrect results or damages resulting from the use of the Philia lock's sensor. Certain home configurations may impede the Philia lock's sensor more than others.

### CAUTION

The setting and operation of each function may not be able to be implemented due to the loss of function (malfunction), natural disaster, arbitrary change, etc. depending on the installation environment and frequency of use. Please read User Manual and Install Guide before using the product

### CAUTION


Please be careful with personal information by using BLE and Z-wave settings

### CAUTION

Please observe the following precautions in order to avoid injury or damage to property.

- Do not install outdoors in the rain
- Do not disassemble or reassemble it as it may cause malfunction.
- Do not use any tools to subject the product to excessive force
- Your password and card should be managed carefully
- Please make sure that the door is properly locked when you leave
- Do not spray directly with water or clean it with chemicals such as benzene, thinner, or alcohol

### Package Contents

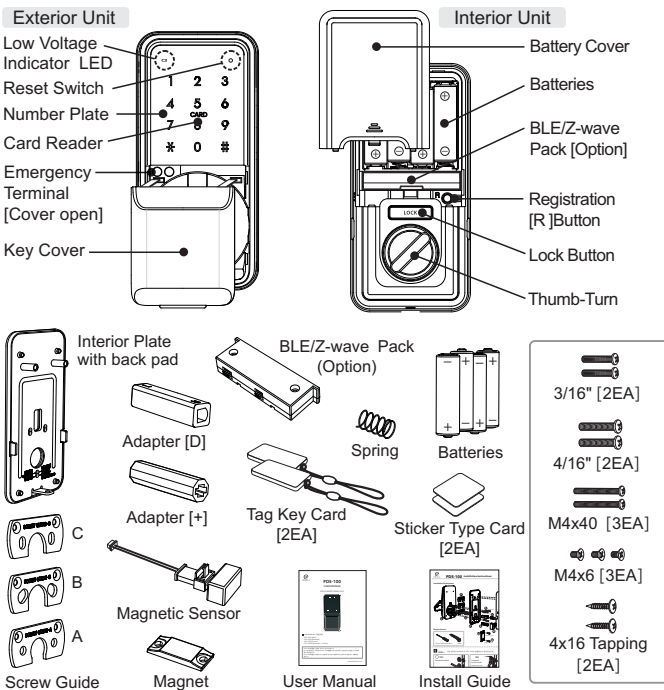


### CAUTION

- Be sure the door is open when you first register or change the passcode as the door may accidentally lock during the process.
- Please change your passcode regularly and re-register your passcode immediately if you think someone else has gained access to it.
- If you lose any of the registered cards, please delete all registered cards immediately.


### Registering Master Passcode [4~10 Digits / Default: 1234]

Register the passcode to be used. Only one master passcode can be registered.

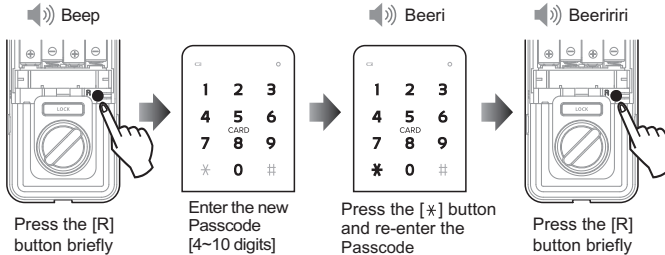

If you register a new passcode, the existing registered passcode will be automatically changed

### Opening the Door with a Passcode

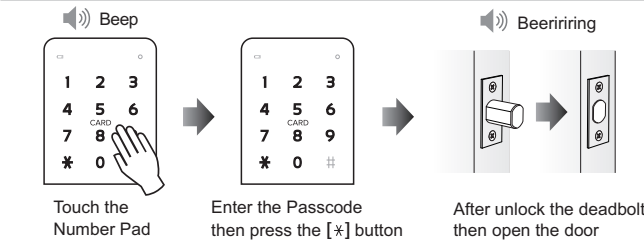


### Reference: Anti-Peek Feature


- If you are concerned about passcode exposure, you may enter a random number before entering your passcode. [up to 20 digits included passcode] i.e) (up to 16 random digits) + (your passcode: 1234 [\*])
- In order to use OPT, BLE Pack(Optional) must be installed to enable unlock on OTP. Please refer to enclosed BLE registration and user manual

### Registering a RFID Card or Key Tag

Up to 30 RFID user cards can be registered including smartphone NFC. The same card will not be registered twice during registration.

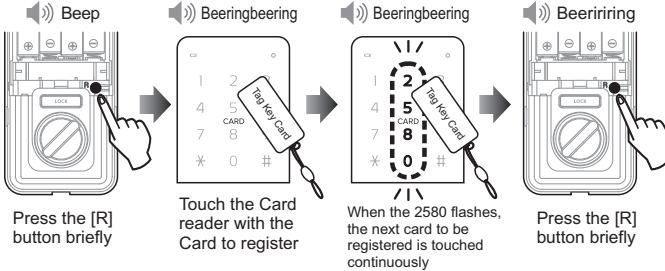


### Opening the Door with a RFID Card or Key Tag

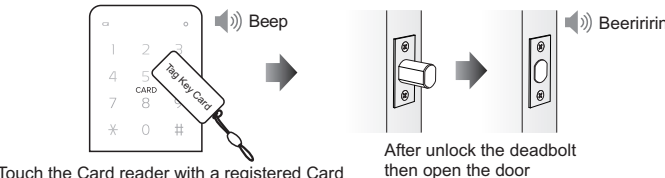


- Depending on the model of the smartphone, Sticker Type Card may not be registered.
- If the card surface is metallic, the recognition rate may be significantly degraded or not recognized.
- The card may not be recognized depending on the smartphone attachment.
- When using Sticker Type Card, you need to turn off NFC function on the smartphone.

### Registering Smartphone NFC Card [Only available with BLE models]

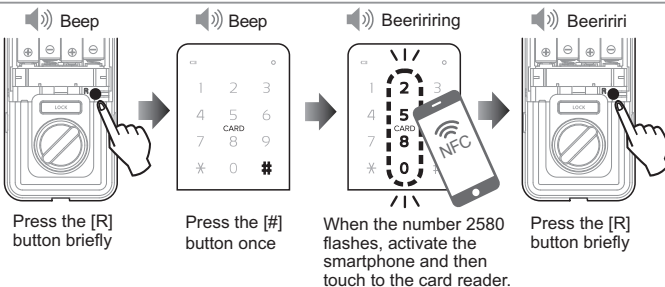


After installing BLE app, activate NFC Mode in the app menu before use

### Opening the Door with a Smartphone NFC Card

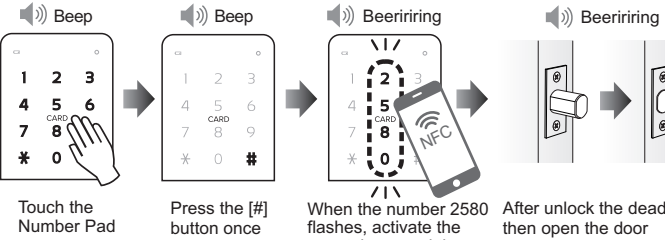


### Delete all Registered Cards

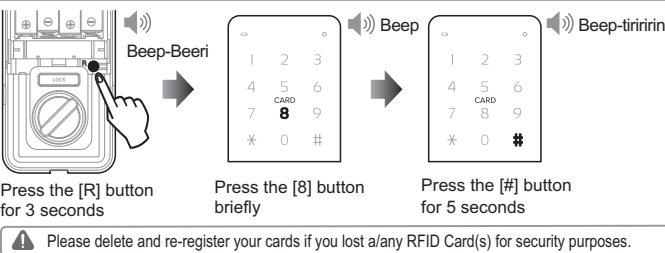


Please delete and re-register your cards if you lost a/any RFID Card(s) for security purposes.

### Delete Individual Registered Card

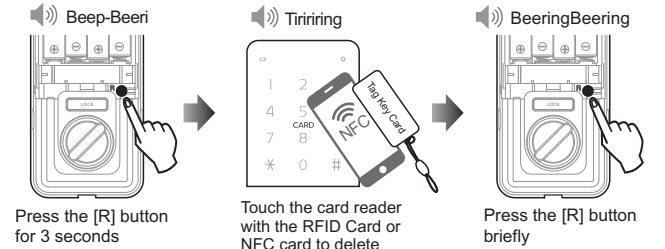


- Please keep your passcode and card registration safe.
- If the registered passcode or card is deleted or not recognized, it is recommended to register or reset immediately.

### Auto Lock Setting

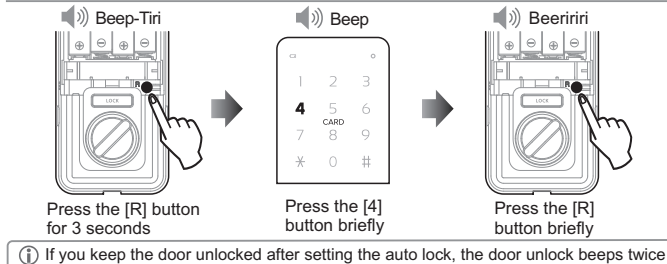


If you keep the door unlocked after setting the auto lock, the door unlock beeps twice

### Auto Lock Feature

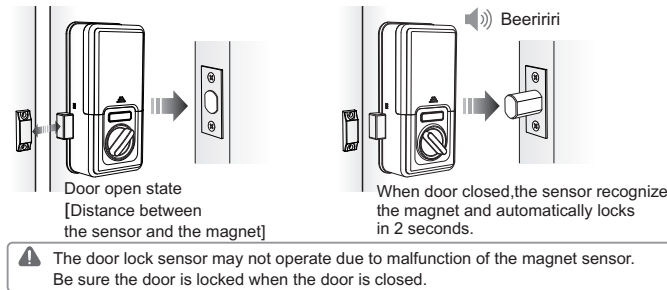


The door lock sensor may not operate due to malfunction of the magnet sensor. Be sure the door is locked when the door is closed.

### Manual Lock Setting

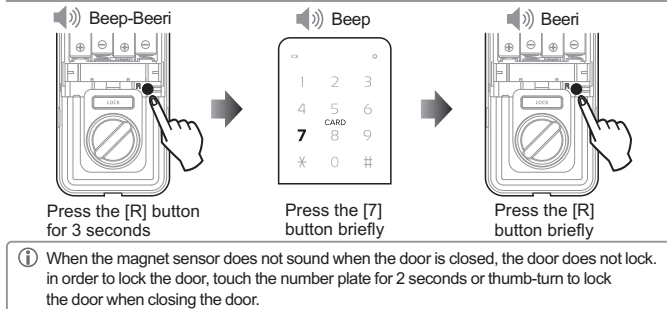


When the magnet sensor does not sound when the door is closed, the door does not lock. In order to lock the door, touch the number plate for 2 seconds or thumb-turn to lock the door when closing the door.

### Automatic Re-Lock Feature

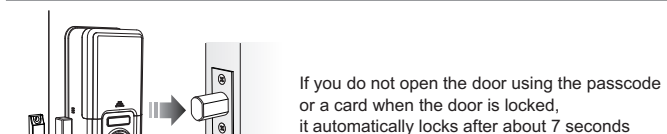


### Double Authentication Mode Setting(On) [Passcode and Card must be registered]

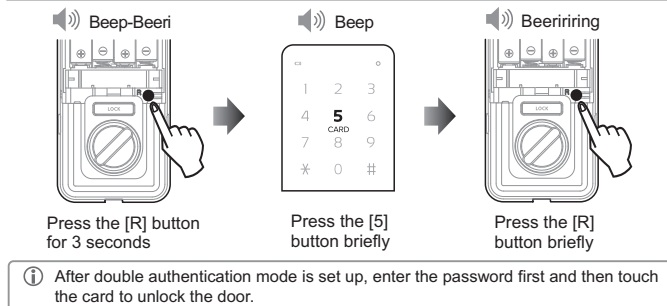


After double authentication mode is set up, enter the password first and then touch the card to unlock the door.

### Double Authentication Mode Off

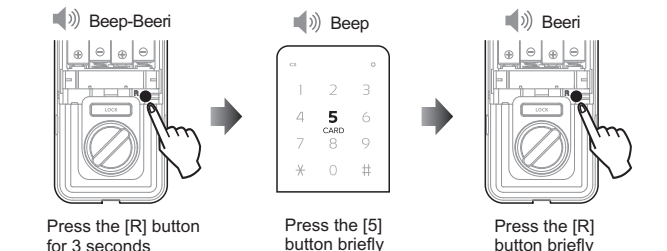


### Registration Authentication Mode Setting (On)

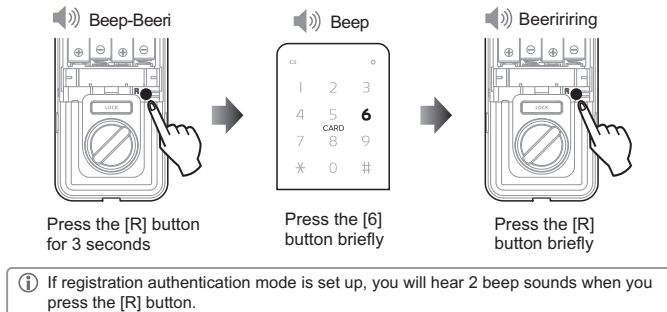

If registration authentication mode is set up, you will hear 2 beep sounds when you press the [R] button.

### Registration Authentication Mode Off

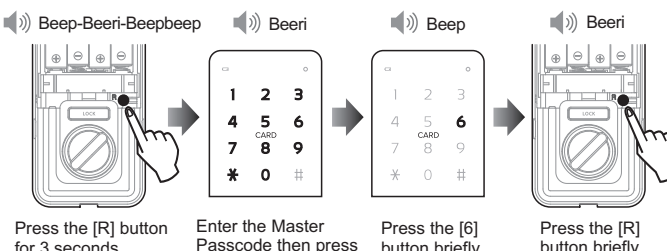

- If you turn off registration authentication mode, registered guest passcode will be automatically deleted.
- [When the registration authentication mode is on]
- The guest passcode function is activated and the double lock mode is automatically off
- Press the [R] button first, then enter the passcode and touch [\*] key to turn it on or off.



Registering Guest Passcode [Maximum10 Guests]

Press the [R] button briefly

Enter the master Passcode then [\*] button

Enter the Guest Code assignment (50~59) [50,51,52,...,59]

Press the [#] button briefly

Enter the Guest Passcode to be registered [4~10 digits]

Press the [\*] button briefly

Re-Enter the Guest Passcode again

Press the [R] button briefly

You can not set the any function with the guest passcode, only unlock the door by the guest passcode.

Delete Individual Guest Passcode

Press the [R] button for 3 seconds

Enter the master Passcode then [\*] button

Enter the Guest Code assignment to be deleted.

Press the [#] button for a second

Delete All Guest Passcode

Press the [R] button for 3 seconds

Enter the master Passcode then [\*] button

Enter [00]

Press the [#] button for 5 seconds

If you turn off registration authentication mode, registered guest passcode will be automatically deleted.

Outgoing Security Mode Feature

After the door is locked, touch the number pad in for 3 seconds

While touching, the number pad is flashed three times at intervals of one second, and the mode is set up.

It will be released when open the door with a passcode or card from the outside.

An alarm sounds when someone try to open the door by Thumb-Turn from the inside. It does not work when the magnetic sensor is faulty, malfunction or not recognized the magnet.

Internal Security Mode Feature

To Activate(ON): Press and hold the [LOCK] button for 3 seconds while the door is locked.

To OFF: Press the [LOCK] button briefly or unlock the door by Thumb-Turn then open the door

You can not unlock the door with a registered passcode or card from the outside. It does not work when the magnetic sensor is faulty, malfunction or not recognized the magnet.

Volume Control Setting

Press the [R] button for 3 seconds

Select and press the desired volume among 1,2,3 on the Number Pad [1]Silent, [2]Low, [3]High

Press the [R] button briefly

Etiquette Mode Feature

When the door is locked, touch and hold the Number Pad for one second, it will be set when the Number Pad flashes once.

Enter the Passcode or touch the card when the Number Pad is on

system sounds are muted for one-time entry

It is one-time function, It will operate normally with the volume set after unlock and lock the door

Anti-Peek Feature [Hidden Passcode]

If you are concerned about passcode exposure, you may enter a random number before entering your passcode.[up to 20 digits included passcode] i.e) If your passcode is 1234: (up to 16 random digits) + (your passcode: 1234 [\*])

Touch the Number Pad then the Pad on

Enter any other number first then enter the registered passcode at the last.

Press the [\*] button to open the door

High Temperature Alarm

If an alarm occurs during an internal fire or a high temperature, the door will automatically unlock.

The alarm sounds for 3 minutes continuously. [Inside temperature : 158 °F ± 41 °F]

Temperature may vary depending on installation environment

It will be off when it is authenticated by registered passcode or cards.

It will be off when the battery is removed.

Trespass Alarm

When the door is forcibly unlocked or abnormally unlocked, an audible alarm sounds for 3 minutes continuously.

It will be activated after 7 seconds from door lock.

It will be off when it is authenticated by registered passcode or cards.

It will be off when the battery is removed.

Passcode Error Locked Alarm

An error sounds when authentication is attempted with an unregistered password or card, if 5 times authentication errors occur, an alarm sounds and all operations stop for 3 minutes.

Deadbolt Jam Warning

If the deadbolt does not work properly cause installed incorrectly or mechanically, the alarm sounds when unlocking or locking the door.

Tiringtiring-Tiringtiring-Tiringtiring

Emergency Power Contact

Contact the 9V Battery(6LR61) to Emergency Power Contact

Enter the passcode or card in contact state

9V Battery(6LR61) [Not Included]

When buying a 9V battery, please purchase replace batteries together [Change Batteries Spec : 1.5V LR6 AA Size ALKALINE(4ea)]

Z-Wave Activation [Module Sold Separately : While your Hub is in Pairing Mode, follow these steps. \* Z-Wave Module must be installed

Press the [R] button for 6 seconds

Press the [1,4,7] button sequentially

Press the [R] button briefly

Connecting Communication between Z-wave Module and Smarthome Gateway

If the communication connection is not established within 10 seconds, the registration will be canceled. Please try again.

When Registration Authentication mode is set, holding the button for 6 seconds will flash the number pad twice.

When the door unlock / lock using communication, it may not perform the operation due to communication error. Please check unlock / lock status.

Controll using Z-wave through Smart Home APP

Press [Unlock] button to unlock from Smart Home APP

Press [Lock] button to lock from Smart Home APP

Delete Z-wave Communication

Press the [R] button for 6 seconds

Press the [3,6,9] button sequentially

Press the [R] button briefly

Deleting Communication between Z-wave Module and Smarthome Gateway

The PDS-100 Z-Wave is a secure electronic door lock that supports the Z-Wave Plus standard, which is compatible with earlier versions of Z-Wave.

A security enabled Z-Wave controller must be use. The PDS-100 supports the standard security S0 and the new security standard S2.

The PDS-100 can be included and operated in any Z-Wave network with other Z-Wave certified devices from other manufacturers and/or other applications.

All non-battery operated nodes within the network will act as repeaters regardless of vendor to increase reliability of the network.

BLE(Bluetooth Low Energy) Setting [Optional] \* BLE module must be installed

Press [Unlock] button to unlock from Smartphone APP(KeyWe)

Press [Lock] button to lock from Smartphone APP(KeyWe)

BLE Setting and Manual

1. Search and download APP[KeyWe] from Apple APP Store or Google Play Store

2. Open the KeyWe APP and sign up with email

3. Door Lock Registration

4. Controll through KeyWe APP

Other Functions

\* Make sure Optional Module is installed

Z-wave & BLE Code

The Z-wave or BLE information is enclosed in the box. Please attach it directly to the product or inside of the battery cover before or after registration.

You can not re-register when you lose the code information. [Z-wave & BLE code] If connection is not established, re-insert the communication module or check the pins are damaged.

Soft Reset [All settings are reset except BLE & Z-wave]

If you suspect that your security is weak due to the leakage of your password or the loss of your registered card, we will reset your registered password and card to improve security. [When deleting BLE information, delete it from APP of registered smartphone.]

If you do Soft Reset, all settings are reset except BLE & Z-wave information.

Beep-Beerirring

Press the [R] button for 9 seconds

Press the [1,4,7,8,9,6,3] button sequentially

Press the [R] button briefly

It is recommended to use it when registering incorrectly while setting.

Factory Reset [All settings are reset except BLE]

Beep-Beerirring

Press the [R] button for 9 seconds

Press the [1,2,3,6,5,4,7] button sequentially

Press the [R] button briefly

If you do Factory Reset, all settings are reset except BLE information. It is recommended to use it when registering incorrectly while setting.

Default Value of User & Factory Reset

Master Passcode	1234	※ After initialization, please register a new Passcode and Cards again.
Volume level	High[3]	
Auto/Manual Lock	Auto	
Double Auth	Off	
Registration Auth	Off	

Regulatory Compliance

This product complies with standards established by the following regulatory bodies:

Federal Communications Commission (FCC)

Industry Canada

FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/ TV technician for help.

IMPORTANT! Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 50 mm

Industry Canada

This device complies with Industry Canada licenceexempt RSS standard(s). Operation is subject to the following two conditions:

( 1 ) this device may not cause interference, and ( 2 ) this device must accept any interference, including interference that may cause undesired operation of the device.

This device complies with ISSED radiation exposure limits set forth for an uncontrolled environment and meets the ISSED radio frequency (RF) Exposure Guidelines. It is desirable that it should be installed and operated keeping the radiator at least 50 mm or more away from person's body.

Canada, avis d'Industrie Canada (IC)

Cet appareil est conforme aux normes RSS exemptes de licences d'Industrie Canada.

Son utilisation est soumise aux deux conditions.

suivantes : (1) cet appareil n'engendre pas d'interférences, et (2) cet appareil doit tolérer tout type d'interférences, notamment les interférences pouvant provoquer une utilisation non désirée de l'appareil.

Cet équipement est conforme aux limites établies par Industrie Canada en matière d'exposition aux radiations dans un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 50 mm entre le radiateur et votre corps.between the radiator and your body.

Specification

Contants	Specification	Remark
Exterior	79mm(W) X 167.4mm(H) X 40mm(D) Polycarbonate & Al Diecasting	Volt : DC 6V Operating Temperature : -25~50°C High Temperature : 70°C 5°C Sensor Operating
Interior	71.3mm(W) X 151.8mm(H) X 39mm(D) Polycarbonate & Zn Diecasting	
Battery	4 X AA Alkaline 1.5V Batteries (LR6) (6V)	
Card	ISO14443A PART3 TYPE	
Option	BLE Communication Pack Z-Wave Communication Pack BLE + Z-Wave Communication Pack	Sold Separately

The battery life is 15 months when used 10 times a day.

※ Battery usage time may vary depending on the installation environment and frequency of use.

Setting		Default	Summary	Page
Master Passcode Setting	1234	[R](b) -> Passcode -> [*] -> Passcode again -> [R](b)		4
Registering Card	None	[R](b) -> Touch Card (continuous registration) -> [R](b)		5
Delete Card		[R](3S) -> [8] -> [#](5S)		6
Auto Lock	Auto	[R](3S) -> [4] -> [R](b)		7
Manual Lock		[R](3S) -> [7] -> [R](b)		7
Double Auth Mode On	Off	[R](3S) -> [5] -> [R](b)		8
Double Auth Mode Off		[R](3S) -> [5] -> [R](b)		8
Registration Auth Mode On	Off	[R](3S) -> [6] -> [R](b)		9
Registration Auth Mode Off		[R](3S) -> Master Passcode -> [*] -> [6] -> [R](b)		9
Reg. Guest Passcode [Individual]	None	[R](b) -> Master Passcode -> [x] -> Guest code assignment [50~59] -> [#] [in Reg. Auth mode On] -> Guest passcode to be reg. -> [x] -> Guest passcode again -> [R](b)		10
Delete Guest Passcode [All]	None	[R](3S) -> Master Passcode -> [x] -> Guest code assignment to be deleted [50~59] -> [#](1S)		10
Delete Guest Passcode [All]	None	[R](3S) -> Master Passcode -> [*] -> [00] -> [#](5S)		11
Outgoing Security Mode On	Off	After the door is locked, touch and hold the number pad in for 3 seconds -> The number pad is flashed three times		11
Internal Security Mode On		Press and hold the [LOCK] button for 3 seconds while the door is locked		11
Internal Security Mode Off	Off	Turn the Thumb-Turn or press the [LOCK] button		11
Volume [Silent]		[R](3S) -> [1] -> [R](b)		12
Volume [Low]	High	[R](3S) -> [2] -> [R](b)		12
Volume [High]		[R](3S) -> [3] -> [R](b)		12
Registration Z-wave	Off	[R](6S) -> [147] -> [R](b)		14
Delete Z-wave		[R](6S) -> [369] -> [R](b)		14
Soft Reset	Factory Mode	[R](9S) -> [1478963] -> [R](b)		16
Factory Reset		[R](9S) -> [1236547] -> [R](b)		16